# **Sloan Flushometers Maintenance Schedule**

## Manual diaphragm flushometer

		Life Expectancy Industry Standard / Sloan Standard	3/4+ years	3/5+ years	15/20+ years
	Handle assembly Internal parts	Maintenance Indicator  1. Leaking around the handle 2. Drooping handle 3. Short erratic flush	<b>⊘</b>		
	Vacuum breaker Internal (baffle and sack)	Maintenance Indicator  1. Leaking around the vacuum breaker vent holes during flush cycle	<b>⊘</b>		
	Inside cover	Maintenance Indicator  1. Slow leaks into the fixture 2. Flush cycle too long or too short 3. Grooves cut into inner cover from diaphragm segments	<b>⊘</b>		
<b>0</b> =	<b>Diaphragm kit</b> Regal	Maintenance Indicator  1. Slow leaks into the fixture 2. Flush cycle too long or too short	<b>⊘</b>		
	<b>Diaphragm kit</b> Royal/Sloan	Maintenance Indicator  1. Slow leaks into the fixture. 2. Flush cycle too long or too short		<b>⊘</b>	
	Stop assembly Internal parts	Maintenance Indicator  1. Leaking around the stop  2. Failure to completely shut off water  3. Excessive wrench marks on bonnet		<b>⊘</b>	
	Brass parts Body, outside cover, stop and vacuum breaker tube	Maintenance Indicator  1. Compromised chrome finish 2. Missing or distorted threads			<b>⊘</b>
00	Flanges & connections	Maintenance Indicator  1. Compromised chrome finish 2. Missing or distorted threads 3. Excessive wrench marks on coupling 4. Leaking around connections			<b>⊘</b>



### **Sloan Flushometers Maintenance Schedule**

#### Battery-powered diaphragm flushometers

(Same as manual diaphragm flushometer with exception of following parts)

		Life Expectancy Industry Standard / Sloan Standard	<b>3/4+</b> years	3/6+* years	5/7+ years	20/25+ years
CUMACELL	Batteries-alkaline	Maintenance Indicator  1. Blinking LED 2. Unit will not flush		<b>⊘</b>		
B	Sensor ring cover assembly (includes solenoid)	Maintenance Indicator  1. Unit will not flush 2. Unit will continuously leak into fixture			<b>⊘</b>	

#### Hardwired diaphragm flushometers

(Same as battery-powered diaphragm flushometer with exception of following parts)

Actuator cartridge assembly	Maintenance Indicator  1. Leaking around button upon activation	<b>⊘</b>		
Solenoid	Maintenance Indicator  1. Unit will not flush 2. Unit will continuously leak into fixture		<b>⊘</b>	
Transformer	Maintenance Indicator  1. Unit will flush intermittently or not at all			<b>⊘</b>



<sup>\*</sup>Sloan battery operated flushometers provide a blinking low battery signal when the batteries need to be replaced. Failure to replace batteries when needed can cause leakage and may result in damage to the flushometer electronics.

#### Sloan Flushometers Maintenance Schedule

#### Hydraulic actuator flushometers

(Same as manual diaphragm flushometer with exception of hydraulic push button assembly)

Life Expectancy Industry Standard / Sloan Standard		3/4+ years	3/5+ years	
	Hydraulic push button assembly	Maintenance Indicator  1. Leaking around the button upon activation	<b>⊘</b>	

#### Manual piston flushometer

(Same as manual diaphragm flushometer with exception of piston kits)

	Piston kit-GEM-2	Maintenance Indicator  1. Slow leaks into the fixture  2. Flush cycle too long or too short	<b>⊘</b>	
<b>**</b> O	Piston kit-Crown	Maintenance Indicator  1. Slow leaks into the fixture 2. Flush cycle too long or too short		<b>⊘</b>

This maintenance guide is intended to be a guide, based on Sloan's 110 years of experience. There are many factors that impact how long flushometers and their parts last, including the following:

- Water quality
- Vandalism and abuse
   Regular maintenance
- High traffic
- Proper installation
   Plumbing system

Please note that life expectancy is different than warranty. Sloan's limited 3 year warranty applies to all Sloan parts.

